BMW Z3 After Market Media Centre/GPS RADIO SYSTEM Wiring Codes

3 Main Wires:

- 1. Red = Ignition switch B+ (1A Fused)
- 2. Yellow = Constant 12v (also provides memory back-up) B+ (Fused)
- 3. Black = GROUND (Steering Wheel Ground)

Accessory Wires

4. Blue = Remote Turn On 12V (power Antenna or Amplifier trigger) B+

5. Pink = Back Sight B+

6. Grey = Steering Wheel Control (1) 7. Green = Steering Wheel Control (2)

8. Orange = Illuminated Backlight/Dimmer B+

9. Brown = Brake B-


Note: there maybe other accessory wires, if not needed, tape off or terminate ends

Speaker Wires

10. Green = Left Rear + SPEAKER Green/Black right Rear 11. Purple= Right Rear + SPEAKER Purple/Black Rear -

12. White= Front Left + SPEAKER White/Black Front White -

13. Grey = Front Right + SPEAKER Grey/black -

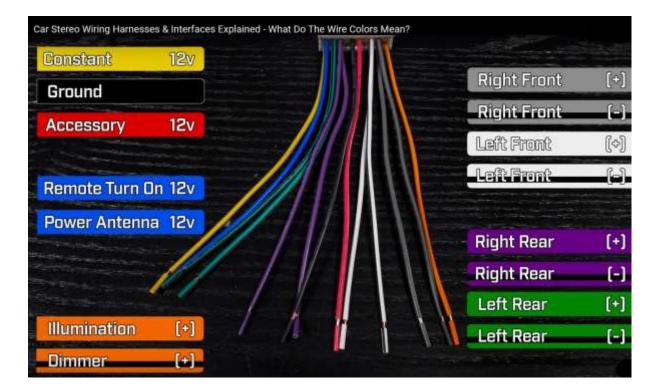

ADDITIONAL FUNCTIONS & AMPLIFIER

RED RCA PLUG = Aux Right Speaker Output WHITE RCA PLUG = Aux Left Speaker Output

ANT = Radio Antenna
GPS = GPS Antenna
MIC = Mic Interface

AUX R = Red Aux Right Speaker Input AUX L = White Aux Left Speaker Input

VOUT = Yellow Video Output

SW = Green Sub Woofer Output RCAM = Yellow Back Sight Camera Input

V-IN = Yellow Video Input

Frequency Range EVFM 87.5 -1080 MHz

AM 522 -1620 KHz.

USA FM 87.5 -107.9 MHz

AM 530 - 1710 KHz

BMW

Wiring Power

Memory (+12v Constant) Gray/Red

Ignition (+12v Switched) Violet

Ground (-) Brown

Illumination White/Blue

Dimmer (none)
Power Antenna White

Speakers

Right Front (+)Gray/White

Right Front (-) Gray/Brown

Left Front (+) Gray/Red

Left Front (-) Gray/Violet

Right Rear (+) Black/White

Right Rear (-) Black/Brown

Left Rear (+) Black/Red

Left Rear (-) Black/Violet